

# Zero Clearance

We start with an MDF strip 1.25" wide by 14 inches long.  
Cut a full 45 degree chamfer.


Round off with either a sander or a router, with no flat spots on top.



Add a piece of double-stick tape at each end.



Fit snugly against the sled, and stick down to the surface of the table saw insert.

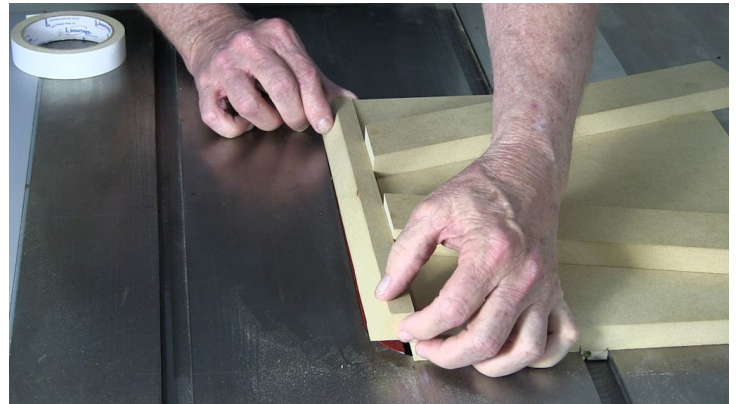


Back sled off and gently remove table saw insert.



# Zero Clearance Strip

Drill holes into the table saw insert at a safe location away from the blade as shown.

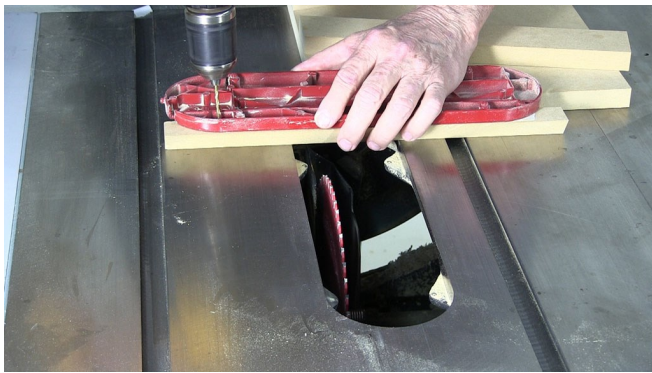

Pre-drill pilot holes for #8 x 1/2 Inch Pan Head Sheet Metal Screws.

Install screws taking care not to shift the strip.



Test fit and make sure the top of the zero clearance strip is not proud of the sled.

Now, go cut some segments!